



Adjusting Steer Sensitivity on 2600 or 2630 Display

Steering Sensitivity changes with soil conditions. Steering Sensitivity can adjusted anywhere from 50-200. If sensitivity is too low you will notice a slow wandering track error. If sensitivity is too high you will notice excessive front wheel motion. It is recommended to adjust in increments of 10.


1. Press Main Menu Button.

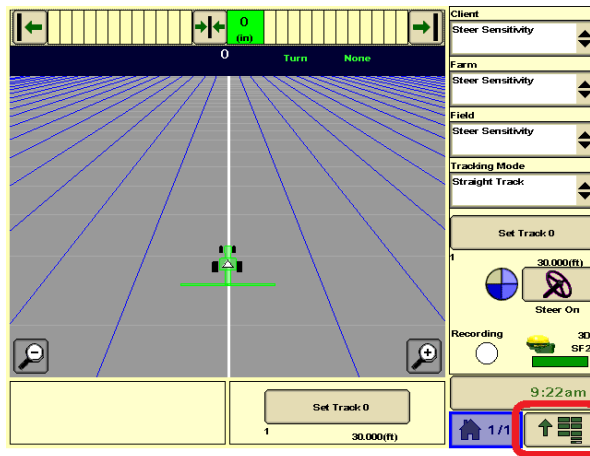


2. Press "GS3 or GS2" Button.

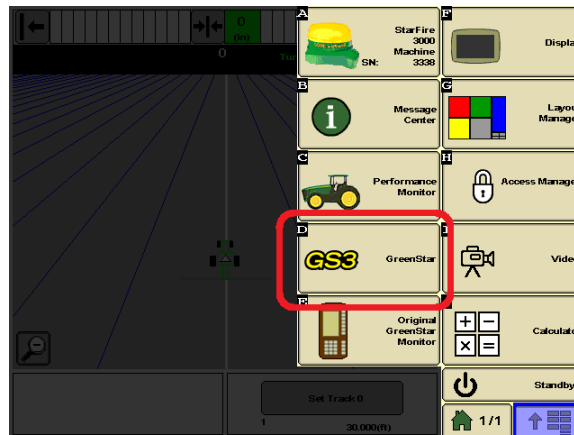


3. Press "Guidance" Button (Letter B).

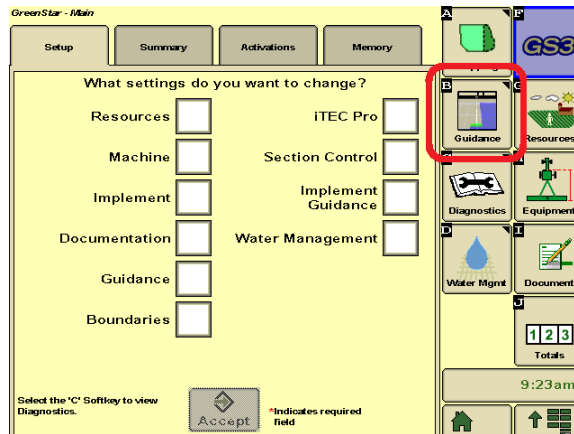

4. Press the Steer Sensitivity input box.

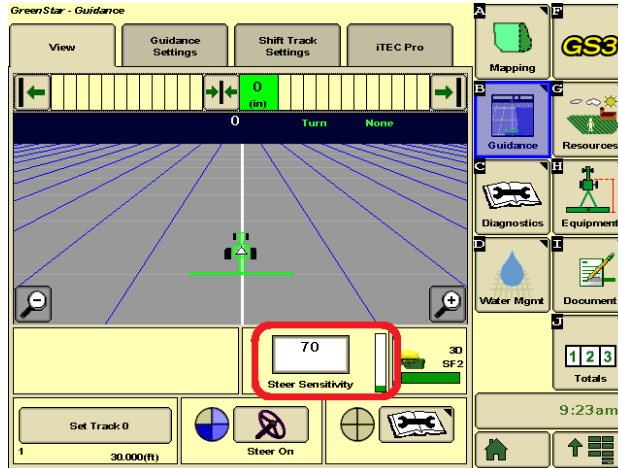

5. Use the number pad to type in desired steer sensitivity value and then press the "Accept" Button.

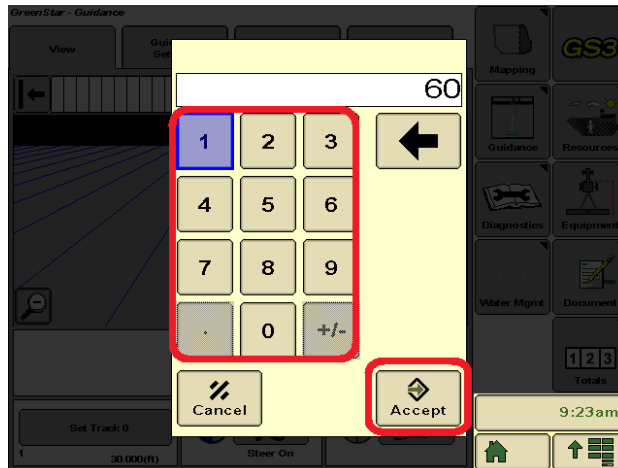

6. Press Home Button and AutoTrac. Adjust Steer Sensitivity as needed.

