



# AutoTrac Setup Procedure For Original Display

1. Press "SETUP" Button.

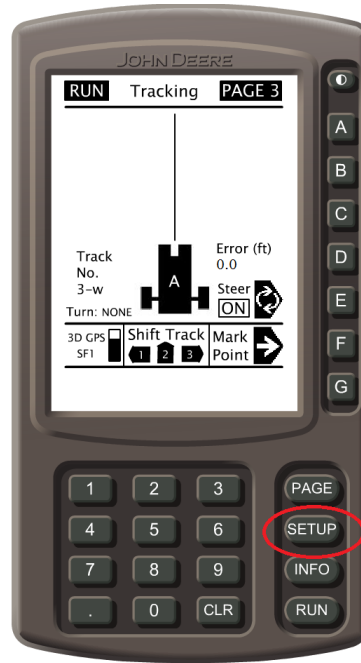


2. Press "A" for Tracking.

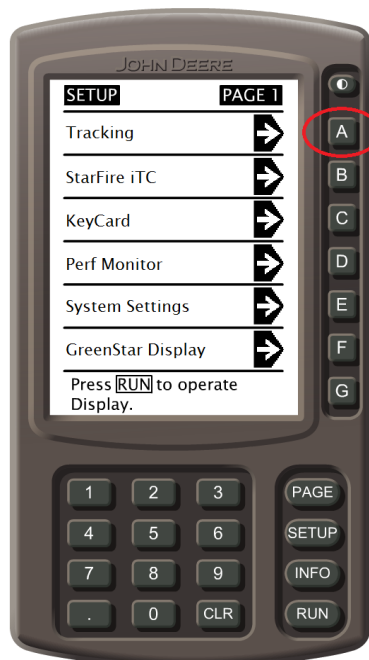




3. Change Track Spacing by Pressing "B" Button. Press "F" Button to Set Point A.

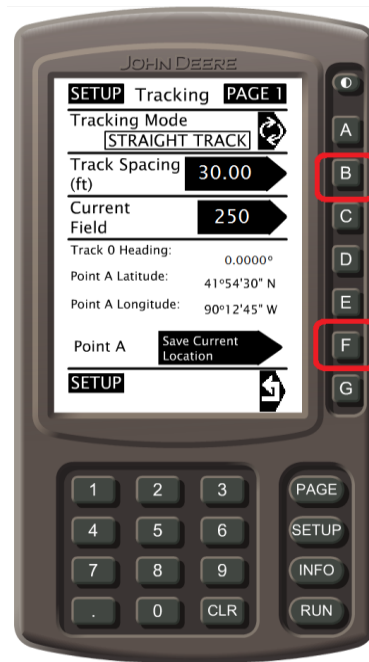


4. Drive a minimum of 50 feet and Press "D" Button to Set Point B.

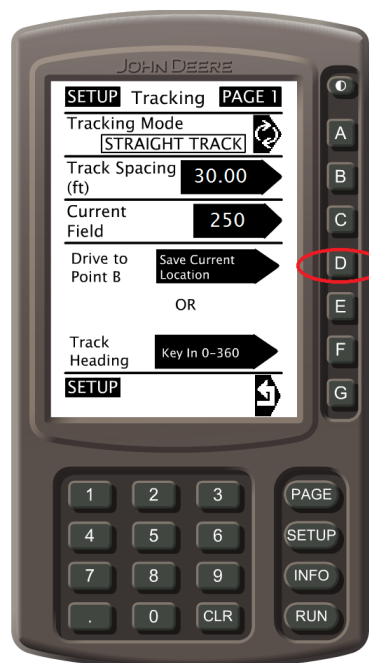

5. Press "Run" Button to go to Run Page.



6. Press "E" to turn Steer On.

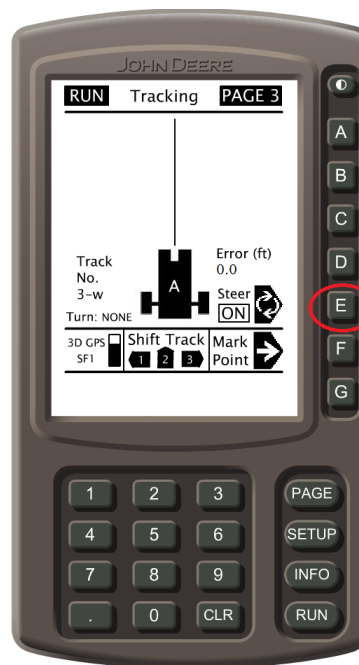

6. Drive close to AB Line and press "Resume or Auto" Switch on Tractor to AutoTrac.

