

# Switching RTK Operating Modes on Original Display


1. Press the "Setup" Button.



2. Press the Button for StarFire Receiver.




3. Press Button "D" for Diff. Correction Setup.

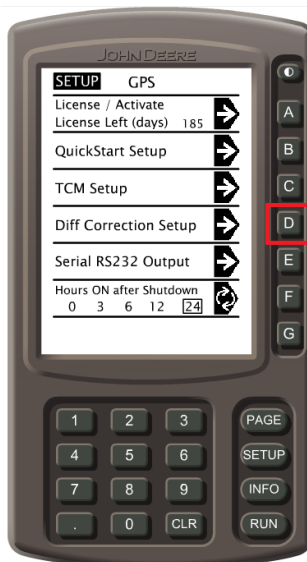

**4. Press Button “A” For RTK Setup.**



**5. Press Button “A” to toggle to the desired RTK Operating Mode that you need. Typically this will either be “Vehicle” or “Quick Survey Base.”**

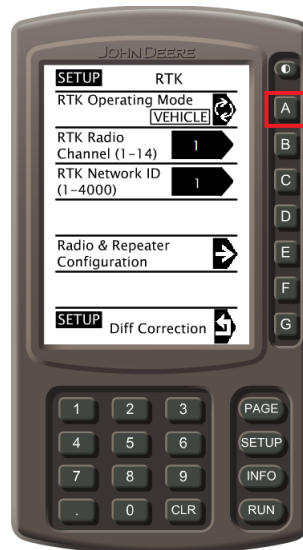

**6. Verify that the correct Radio Channel and Network ID entered for Button “B” RTK Radio Channel and Button “C” RTK Network ID are correct.**

