

Prescriptions on Gen 4 Display

1. Insert the USB Stick into USB Drive on the rear right corner of the cab




2. Press Import Data




3. Press Next

4. Put a checkmark next to the data that you want to import and press Next

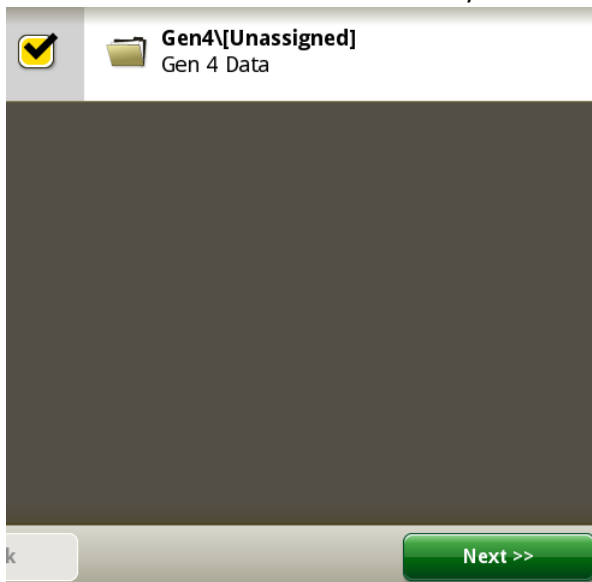

5. Put a checkmark next to Prescriptions and press Import

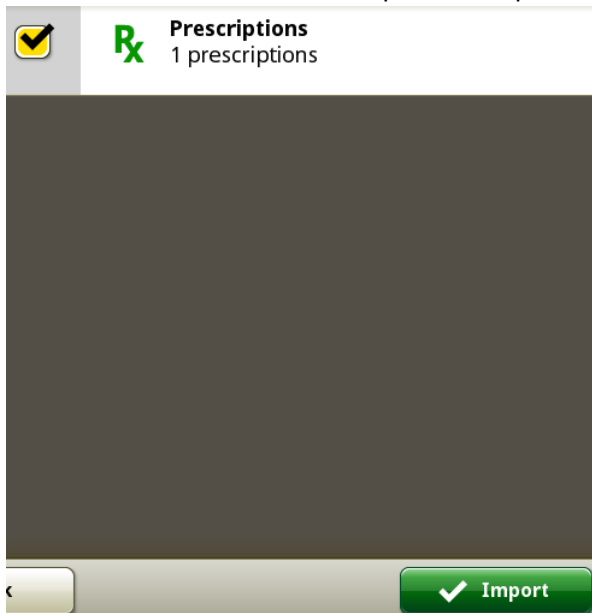




6. When the data is successfully imported press OK




7. Press Setup


8. Press the operation under Work Summary

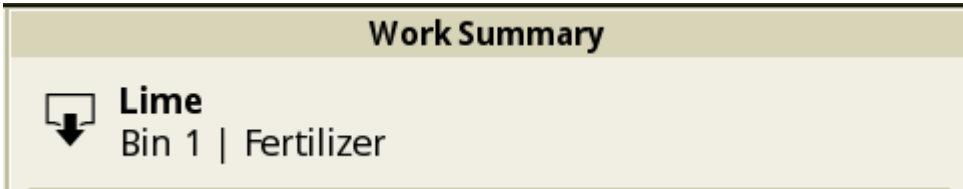

9. Press the Target Rate/RX Box

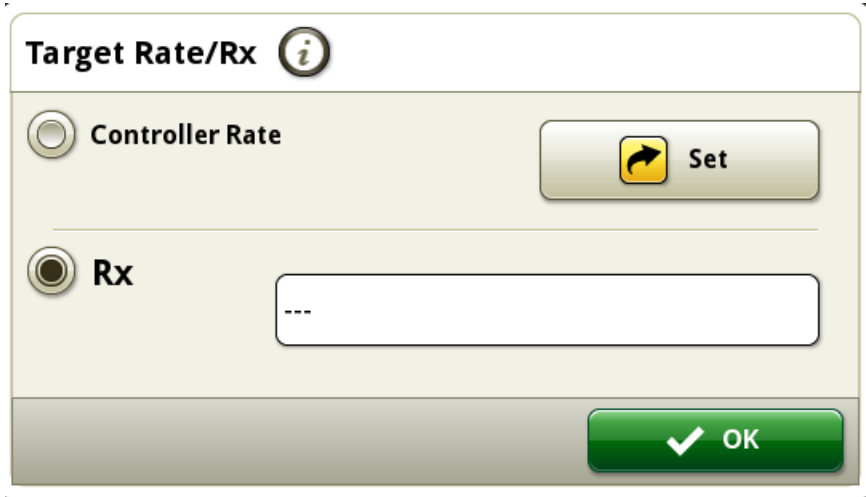

10. Select Rx and press the box next to Rx

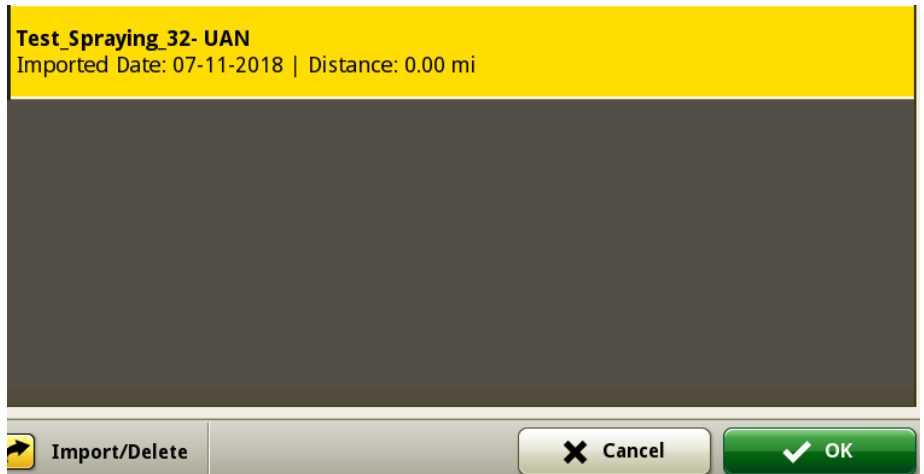


11. Select the Prescription and press OK

12. View the prescription to make sure that it is correct and press OK

Prescription Rate Setup ⓘ

Rx Active Prescription
Test_Spraying_32- UAN



Look Ahead	Multiplier
0.3 sec	100.0 %
Rates lb/ac	Multiplied Rates
MIN 1	1
MAX 5	5
NO GPS ---	---
OUT OF RANGE 0	0

🗑️ Delete Prescription ✕ Cancel ✓ OK

13. The prescription name will show up in the Target Rate/RX Box and press the Yellow X to close

Edit Operation 1 ⓘ ✕

Operation Details

Operation	Product Application
Product Name	Lime
Target Rate/Rx	Prescription (Rx) Test_Sprayi...